
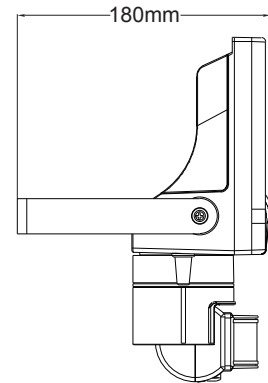


SLL 1150 J High Power Sensor LED Floodlight Instruction

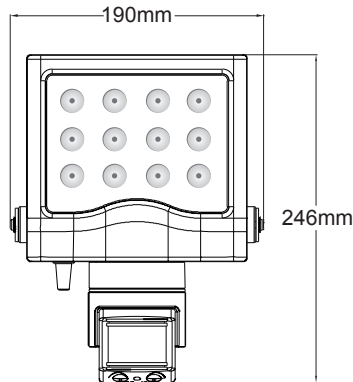


Summary

Packing list in	Quantity
LED Floodlight LEDS 12PCS	1X
$\Phi 6$ Plastic expand	2X
4x30 Screw	2X

The product is a High-power cast LED sensor light; it adopts good sensitivity detector, integrated circuit and SMT. It gathers automatism, convenience, safety, saving-energy and practicality functions. The wide detection field is made up of up and down, left and right service field. It works by receiving human motion infrared rays. When one enters the detection field, it can start the load at once and identify automatically day and night; Its installation is very convenient and Its using is very wide. It has functions of power indication and the detection indication.

Specifications

- Power source: 110-130V/AC
- 220-240V/AC
- Power frequency: 50/60Hz
- Rated load: 20W Max.
- LED quantity: 12PCS
- LED specifications: 3W High Power LED
- Color temperature: 6200K-6700K
- Time setting: min:8sec \pm 3sec
- max:7min \pm 2min
- Light-control: <3LUX~2000LUX(adjustable)
- Detection range: 10~12m Max(24°C)
- Detection angle: 180°
- Viewing angle: 50°
- Working temperature: -10°C~+40°C
- Working humidity: <93%RH
- Installation height: >1.8m~3.5m

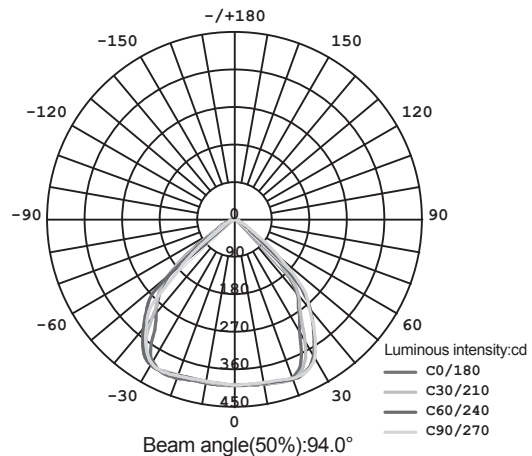



- Power consumption: 0.45W(static 0.1W)
- Detection motion speed: 0.6~1.5m/s
- Luminous flux: 824.76lm
- Weight: about 1.6kg

Function


- Detection field: the detection field (see the following diagram) is made up of up and down, left and right service field, It can be selected according to the consumer's desire. the orientation of moving has great relationship with the sensitivity;
- Can identify day and night: The consumer can adjust work light-control. It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the light-control less than 3LUX when it is adjusted on the "moon" position (min). As for the adjustment pattern, please refer to the testing pattern;

- Power and detection indication: The indicator lamp can flash one time every 4sec after switching on the power. It can flash 2 times every 1sec after it receives the signals. At the same time, it can show the sensor normal conditions for the detection and the power;
- Time setting is added continually: When it receives the second induction signals after the first induction, it will compute time once more on the basic of the first time setting rest. (Set time).
- Time setting is adjustable. It can be set according to the consumer's desire. The minimum time is 8sec±3sec. The maximum is 7min±2min.

Sensor information

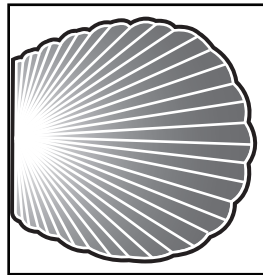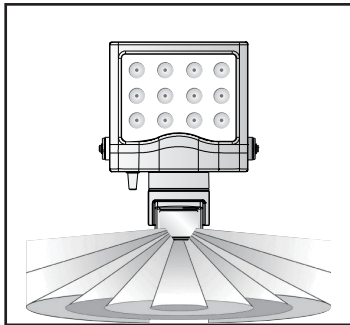


10~12m
Correct moving orientation

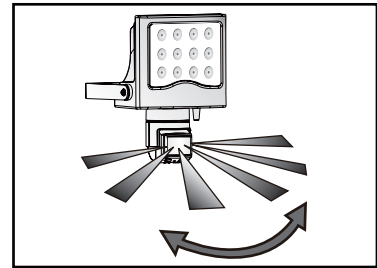

180°
Detection angle

Spectrogram

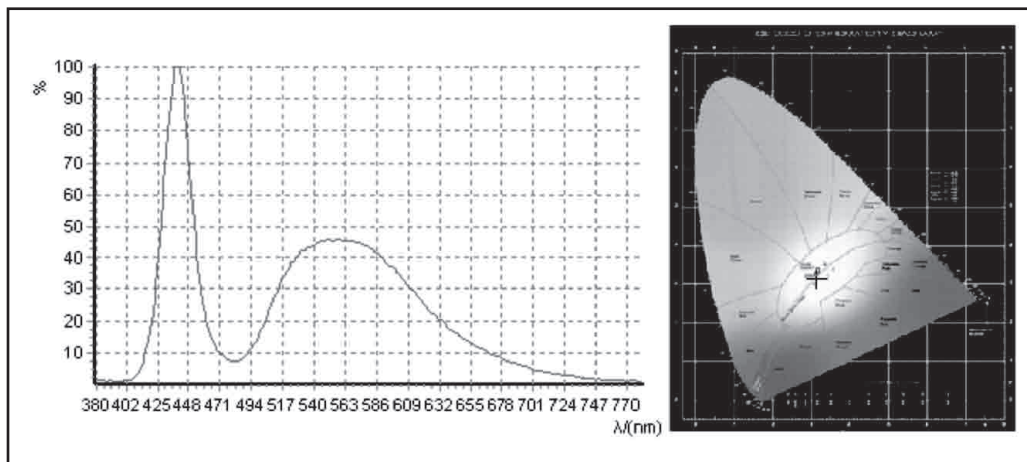


Installation


Note: Please bring the following tools.




Pencil



Electric drill



Hammer




Screwdriver



Warning!

1. Please keep it away from the children.
2. This product can be installed for outdoor, but we suggest that against for the rain/storm & High lights.

- Switch off the power;
- Screw off the nail on the bottom. Open the wire hole. The power wire and the loadwire are bored in the bottom;
- Fix the bottom on the selected position with the inflated screw;
- Connect the power and the load with the connection-wire column according to the sketch diagram;
- Fix the sensor on the bottom, please screw the nail and switch on the power.

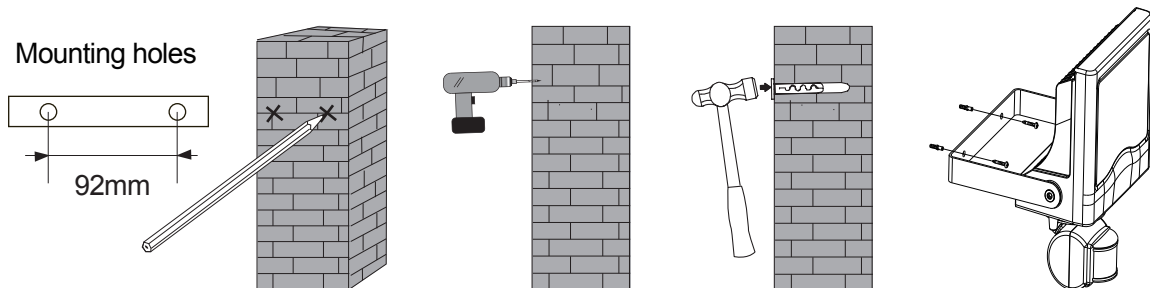


Warning!

Please confirm when shut off the power cord access.

The name of each part

(Lamp shell for aluminum material)

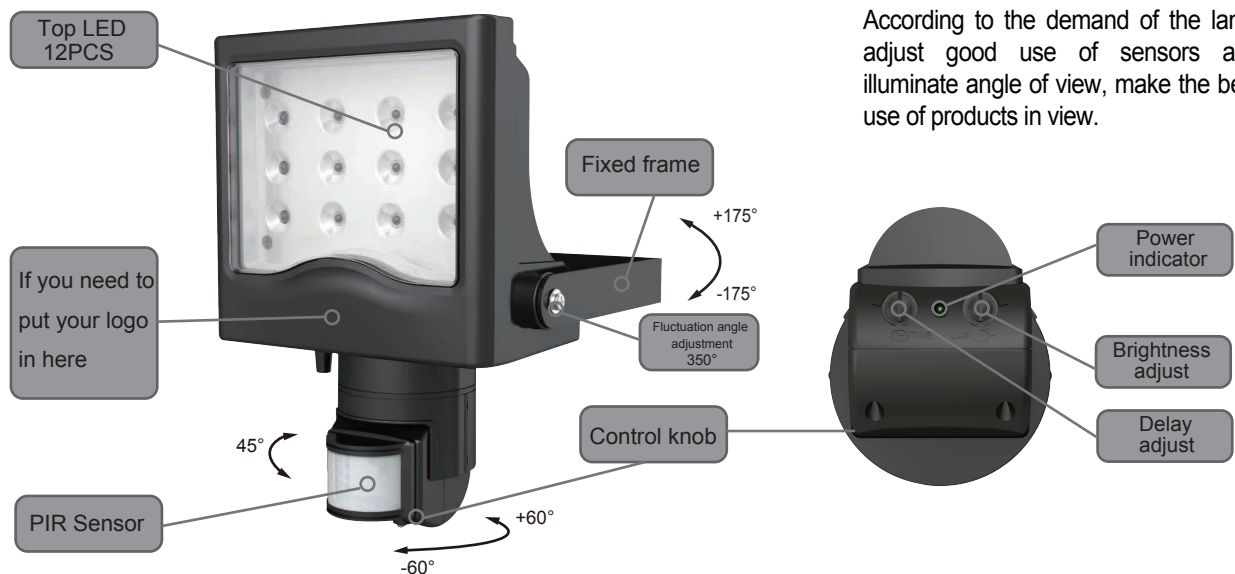

According to the demand of the lamp adjust good use of sensors and illuminate angle of view, make the best use of products in view.

Test

- Turn the light-control knob clockwise on the maximum(sun), turn the time knob clockwise on the minimum;
- When you switch on the power, the load doesn't work and the indicator lamp flashes one time every 4sec. After 5~10sec, the load work and the indicator lamp flash two times every 1sec. Under the conditions of no induction signal the load should stop working within 5~30sec, the indicator lamp should flash still one time every 4sec;
- After the first is out, make it sense again after 5~10sec. The load should work and the indication flash speed is two times every 1sec. The load should stop working within 5~15sec;
- Turn light-control knob anti-clockwise on the minimum. If it is adjusted in the less than 3LUX, the inductor load should not work after load stop working. If you cover the detection window with the opaque objects (towel etc), the load work .under no induction signal condition, the load should stop working within 5~15sec.

Note

- Electrician or experienced human can install it;
- The unrest objects can't be regarded the installation basis-face;
- In front of the detection window there shouldn't be hinder or unrest objects effecting detection;
- Avoid installing it near air temperature alteration zones for example: air condition, central heating, etc;
- For your safety, please don't open the case if you find hitch after installation;
- In order to avoid the unexpected damage of product, please add a safe device of 6A when installing Infrared sensor,for example,fuse,safe tube etc.

Some problem and solved way

- **The load don't work:**
 - a. Check the power and the load;
 - b. If the load is good;
 - c. If the indicator lamp speed quicken after sensing;
 - d. Please check if the working light correspond to the light-control.
- **The sensitivity is poor:**
 - a. Please check if in front of the detection window there are hinderthat effect to receive the signals;
 - b. Please check the ambient temperature;
 - c. Please check if the signals source is in the detection fields;
 - d. Please check the installation height;
 - e. If the moving orientation is right.
- **The sensor can't shut automatically the load:**
 - a. If there are continual signals in the detection fields;
 - b. If the time setting is set to the longest;
 - c. If the power correspond to the instruction;
 - d. If the air temperature change near the sensor, for example air condition or central heating etc.



Warning!

- 1.The LEDS in serial can function when all the seals installed in place.
- 2.Please don't remove or connect with other lamp when powered on.
- 3.When the LEDS in serial are damaged ,you need experienced technician to repair using the same rating LEDS

For type Y attachments: If the external flexible cable or cord of this luminaire is damaged,it shall be exclusively,replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Please confirm with profession installation.

Please cut off power supply before installation and removal operations.

Make sure that you have cut off the power for safety purposes.

Improper operation caused losses, the manufacturer does not undertake any responsibility.